



REPLACEMENT SHOCKS

(2007-2018 Wrangler JK)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Front Shocks

TOOLS REQUIRED

- Jack
- Jack Stands
- Plastic Pry Tool
- Torque Wrench
- Metric Socket Set (15-22mm)
- Metric Wrenches/ Adjustable Wrench

SKU # J132851, J132853, J132855

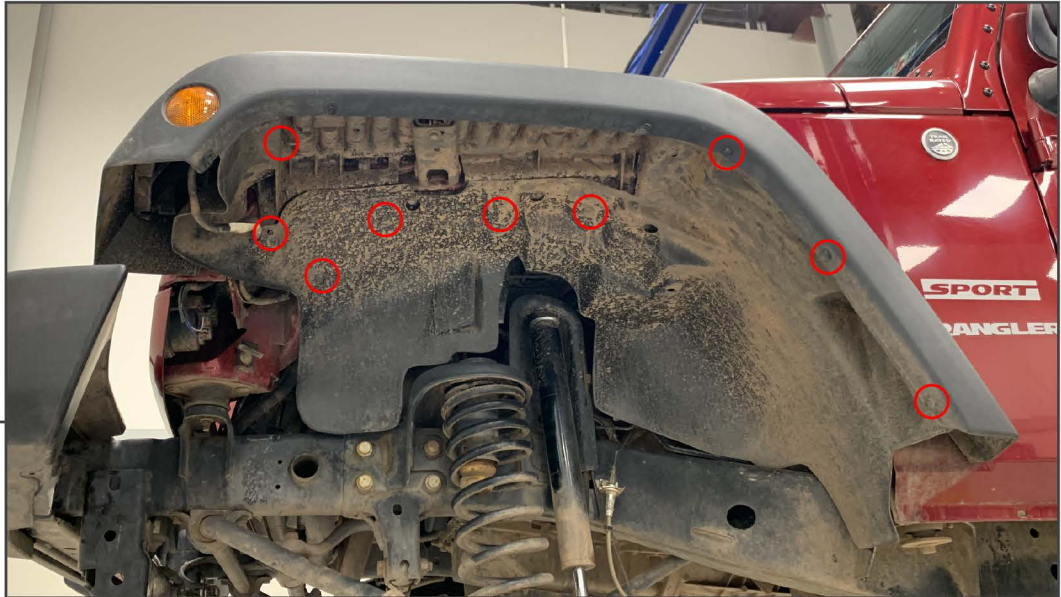


STEP 1

Raise and support the vehicle with a Jack and Jack Stands. Remove the wheel for easier access to the shock assembly. Remove the inner fender liner by removing the various push clips circled above.



STEP 2

Remove the nut, retainer, and rubber bushing from the top of the strut.

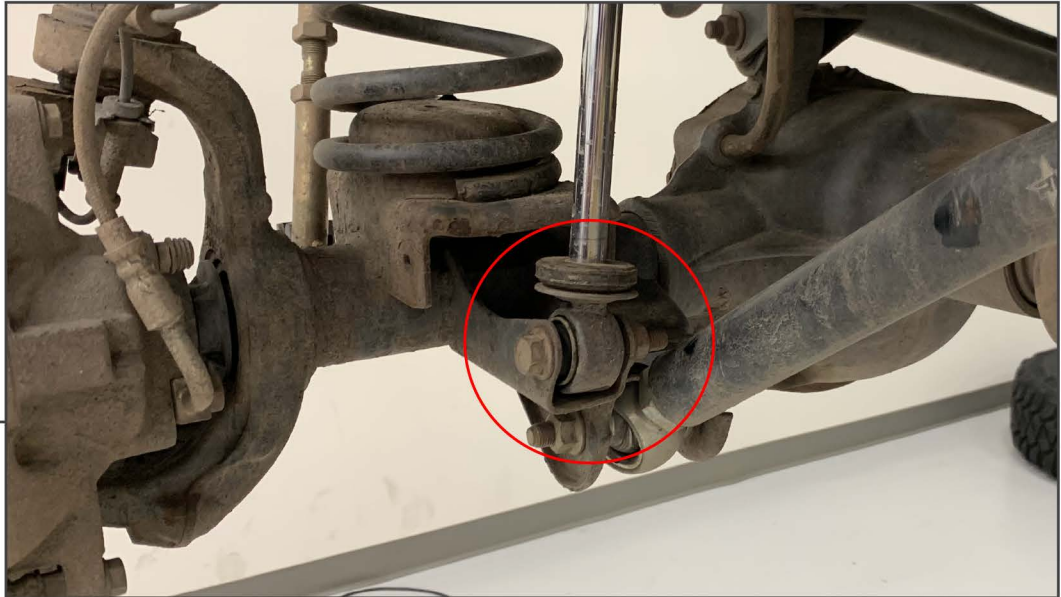

STEP 3

Remove the lower nut and bolt from mounting bracket and remove the shock from the vehicle.



STEP 4

Install (1) Large Washer, and (1) Rubber Bushing on the shock stud. Push the shock through the mounting bracket. Then, install (1) Rubber Bushing, (1) Large Washer, and (1) Nylon Nut. Torque the nut to 20 ft. lbs.



STEP 5

Loosely Install the lower bolt. Install the wheel torque lug nuts to 100 ft. lbs. Remove the Jack and Jack Stands and lower the vehicle. Then, tighten the lower bolt to 56 ft. lbs.