

Installation & CARE

1997-2006 JEEP WRANGLER FENDER FLARES INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


1/4" Ratchet	8 mm socket	10 mm socket	Plastic Pry bar
			

PRODUCT NUMBER

FDF-WRG97B-PK-RS




LET'S START THE INSTALLATIONS

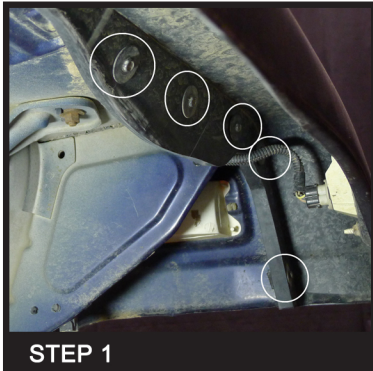


STEP 1

Remove five sets of 8mm screw bolts and rubber backing

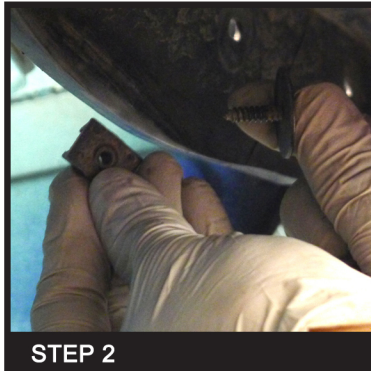

STEP 2

8mm screw and rubber backing removed

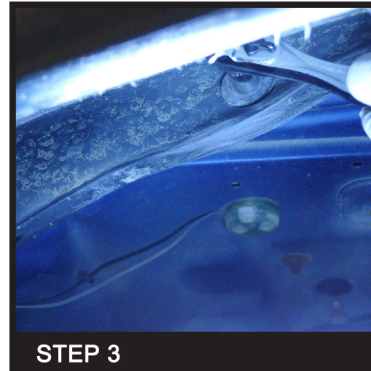

STEP 3

Remove two more sets of 8mm screw bolts and rubber backing



STEP 4

Remove two sets of 8mm screw bolts and rubber backing and (1)8mm bolt



STEP 5

Disconnect signal bulb



STEP 6

Remove fender flare




STEP 7

Remove one 10mm signal light bolt



STEP 8

Remove signal light housing

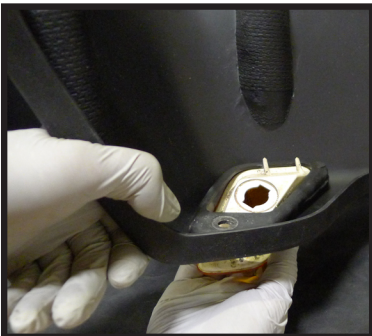


STEP 9

Place signal light housing in new fender flare




STEP 10

Fasten one 10mm bolt to secure signal light

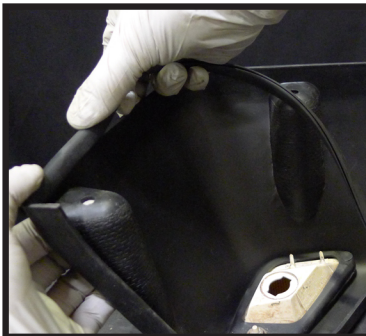

STEP 11

Apply liner onto fender flare

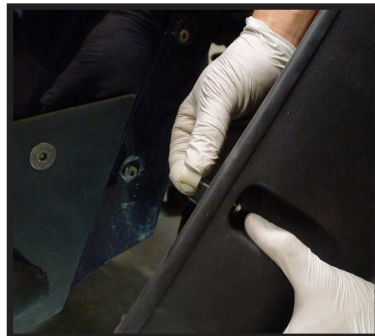

STEP 12

Place bolt and washer into fender flare bolt hole and place spacer in other side



STEP 13

Fasten four sets of bolts, washers, spacers, and nuts to secure fender flare



STEP 14

Place nut behind car body and attach bolt, washer, and spacer



STEP 15

Fasten two sets of bolts, washers, and spacers to finish securing front fender flare




STEP 16

Remove lower wheel well splash guard fastener



STEP 17

Remove two more rear wheel well splash guard fasteners

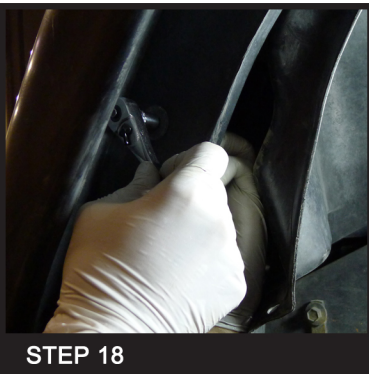

STEP 18

Move wheel well splash guard aside when needed to access rubber backing. Remove all eight sets of hardware and remove fender flare




STEP 19

Fasten three sets of bolts, washers, and spacers to secure fender flare




STEP 20

Fasten remaining five sets of bolt, washer, spacer, and nut to secure fender flare

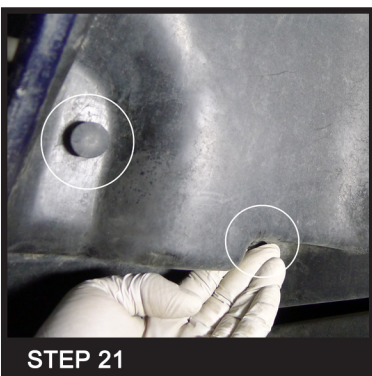

STEP 21

Replace two wheel well splash guard fasteners

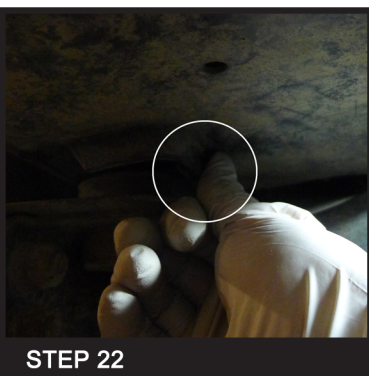


STEP 22

Replace wheel well splash guard



STEP 23

Please repeat the steps from 1 to 22 for the opposite side

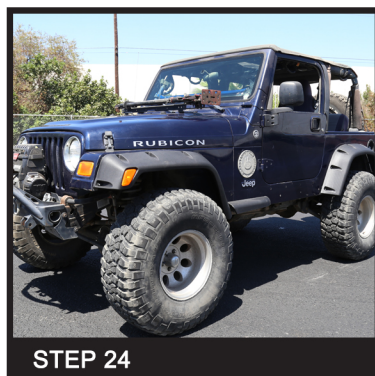

STEP 24

The installation is now complete