



TJ BODY ARMOR KIT

Installation Instructions

Full (6pcs) kit and sub kits



The following instructions are supplied to help aid with the installation part number 11650.50 and can be used with all sub kits. It is the responsibility of the purchaser to properly install all components as described in supplied instructions. OMIX ADA is not responsible for products once attached to vehicles.



11650.17 (Hood Stone Guard) Installation Instructions

Step 1: Clean mounting surface with a strong cleaner or rubbing alcohol. Avoid areas that the product will not be adhered to.

THIS MUST BE DONE FOR ADHESIVE TAPE TO PROPERLY STICK.
FAILURE TO CLEAN COULD RESULT IN POOR ATTACHMENT AND
FAILURE OF PRODUCT TO STAY ATTACHED.

Allow area to dry completely before attaching body armor.

TOOLS NEEDED: (1) Drill, (1) 7/64" drill bit, and (1) Phillips Head screw driver.

Step 2: Test fit the Hood Guard to the vehicle before removing the plastic backing film. This will aid in aligning the piece properly before securing with the two-sided 3M tape.

Step 3: Remove plastic backing film from the affixed two-sided 3M tape. The plastic film can be removed easier with the aid of a knife or cutting blade. Peel from leading edges and pull away from tape.




Step 4: Position Hood Armor close to the hood and attach from the center of hood outward to the edges. Make sure that it is evenly spaced before applying any pressure to armor. When satisfied with placement apply pressure to all areas to properly secure armor to vehicle.

Step 5: After installation, inspect to make sure all tape areas are adhered securely to the vehicle before driving.

NOTE: it is important that the Hood Armor be positioned as far back onto the hood as possible. There should be **NO GAP** between the front of the hood and the inside of the Hood Armor

Step 6: With Hood Armor in the correct position and firmly attached to the vehicle mark or scribe two hole locations on each side of the inner hood. These marks are to be drilled using a 7/64" drill bit. Make sure mark locations are positioned as far inward as possible. This will allow the screws to be located flush with the hood and grille line when lowered. With marks in place carefully drill the two 7/64" holes. **TAKE CARE NOT TO DRILL TO FAR PAST THE INNER LIP OR DAMAGE TO OUTER HOOD SURFACE MAY RESULT.**

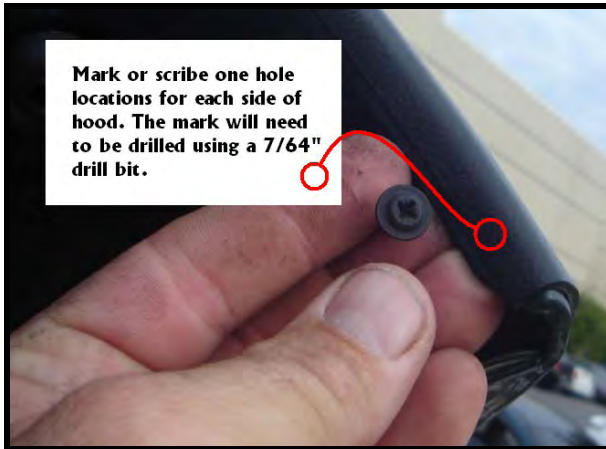

Step 7: After holes have been drilled using the 7/64" bit insert screws to secure Hood Armor to vehicle using a Phillips head screwdriver.



When properly installed the retaining screws should just be visible inside of the vehicle hood line and not interfere with the closing or locking of the hood.

OMIX – ADA or Rugged Ridge is not responsible for damage to vehicle or injuries acquired during the installation or use of this accessory.



Part Number 11650.20(Front Fender guards)



Step 7: Remove the hood stoppers and front turn signals from both front fenders.



Step 8: Clean mounting surface with a strong cleaner or rubbing alcohol. Avoid areas that the product will not be adhered to.

THIS MUST BE DONE FOR ADHESIVE TAPE TO PROPERLY STICK.
FAILURE TO CLEAN COULD RESULT IN POOR ATTACHMENT AND
FAILURE OF PRODUCT TO STAY ATTACHED.

Allow area to dry completely before attaching body armor.

Step 9: Test fit the Fender Guard to the vehicle before removing the plastic backing film. This will aid in aligning the piece properly before securing with the two-sided 3M tape.

Step 10: Remove plastic backing film from the affixed two-sided 3M tape.



Step 11: Position armor onto fender. Make sure that it is evenly spaced before applying any pressure to armor. When satisfied with placement, apply pressure to all areas to properly secure armor to vehicle. Reinstall the front turn signals with supplied longer screws. **Do not over tighten turn signal screws or lens assembly may crack.**

Part Number 11650.01 or 11650.02 (Rear Corner Guards)



Step 12: Remove both left and right side rear tail light assemblies. This will require the removal of 3 bolts for each light that are accessible from the inside of the tail light assembly and from the upper inside of the fender. The lower plastic fender cover can be pulled back without removing. The left side license plate holder and fuel filler neck will also be removed.



Step 13: Clean mounting surface with a strong cleaner or rubbing alcohol. Avoid areas that the product will not be adhered to.

THIS MUST BE DONE FOR ADHESIVE TAPE TO PROPERLY STICK.
FAILURE TO CLEAN COULD RESULT IN POOR ATTACHMENT AND
FAILURE OF PRODUCT TO STAY ATTACHED.

Allow area to dry completely before attaching body armor.

Step 14: Test fit the Rear Corner Guards to the vehicle before removing the plastic backing film. This will aid in aligning the piece properly before securing with the two-sided 3M tape.

Step 15: Position armor onto rear fender. Make sure that it is evenly spaced before applying any pressure to armor. When satisfied with placement apply pressure to all areas to properly secure armor to vehicle. Reinstall the side fuel neck assembly, and rear tail lights. Install the (4) license plate tabs in holes from supplied hardware.





Part Number 11650.05 (Rocker Side Panel Kit)



Step 16: Remove the two fender flare extensions from the body. Extensions are held in place by three bolts located outside of the Jeep® and are assessable from underneath the flare extensions.



Flare extensions can be reinstalled, but holes will need to be drilled in side rocker armor after they have been installed.

Step 17: Clean mounting surface with a strong cleaner or rubbing alcohol. Avoid areas that the product will not be adhered to.

THIS MUST BE DONE FOR ADHESIVE TAPE TO PROPERLY STICK.
FAILURE TO CLEAN COULD RESULT IN POOR ATTACHMENT AND FAILURE OF PRODUCT TO STAY ATTACHED.

Allow area to dry completely before attaching body armor.

Step 18: Test fit the Side Rocker Guards to the vehicle before removing the plastic backing film. This will aid in aligning the piece properly before securing with the two-sided 3M tape.



Step 19: Snap screw clips into the three tabs located under the rocker panels of the vehicle.



Step 20: Position armor onto lower side rocker panels. Make sure that it is evenly spaced before applying any pressure to armor. When satisfied with placement apply pressure to all areas to properly secure armor to vehicle. Secure bottom of rocker guards with hardware supplied.



Part Number 11650.15 (Rear Tailgate Sill)



Step 21: Remove lower tire bump stop if so equipped.



Step 22: Clean mounting surface with a strong cleaner or rubbing alcohol. Avoid areas that the product will not be adhered to.

THIS MUST BE DONE FOR ADHESIVE TAPE TO PROPERLY STICK.
FAILURE TO CLEAN COULD RESULT IN POOR ATTACHMENT AND
FAILURE OF PRODUCT TO STAY ATTACHED.

Allow area to dry completely before attaching body armor.

Step 23: Test fit the Rear Seal Armor to the vehicle before removing the plastic backing film. This will aid in aligning the piece properly before securing with the two-sided 3M tape.

Step 24: Position armor onto lower body seal. Make sure that it is evenly spaced before applying any pressure to armor. When satisfied with placement apply pressure to all areas to properly secure armor to vehicle. Reinstall lower rubber tire stopper.

Part Number 11650.10 (Front Frame Cover)



Step 25: Remove the (4) mounting bolts located on the front outer frame of the vehicle (2 per side). Remove the stock cover and replace with the new Frame guard. Reinstall with original bolts.