

## **Rugged Ridge Pocket Summer Brief Top**

**Installation Time:** 30 Minutes

**No tools required for installation.**

**Additional Parts Required:**

✓ [Rugged Ridge Summer Brief Top](#)

**Installation Instructions:**

1. Unbox the header, making note of all the hardware. (4) plastic washers, (2) metal spacers, (2) metal brackets and (2) tightening knobs




2. Open the Summer Brief Top on a flat clean area and position the windshield header. Once inserted into the pocket sleeve, attach the fabric top to the metal header by using the snap buttons highlighted.



3. Position the threaded hardware, starting with a plastic washer, metal spacer, metal bracket and plastic washer. Everything is held into position with the threaded knob.



4. Place the header over the windshield insulation rubber. Adjust the positioning so the header is situated in the center of the windshield and on the rubber weather stripping along the top of the windshield. Lightly secure into position by having the metal bracket over the mounting loop on the windshield as shown in the photo below.

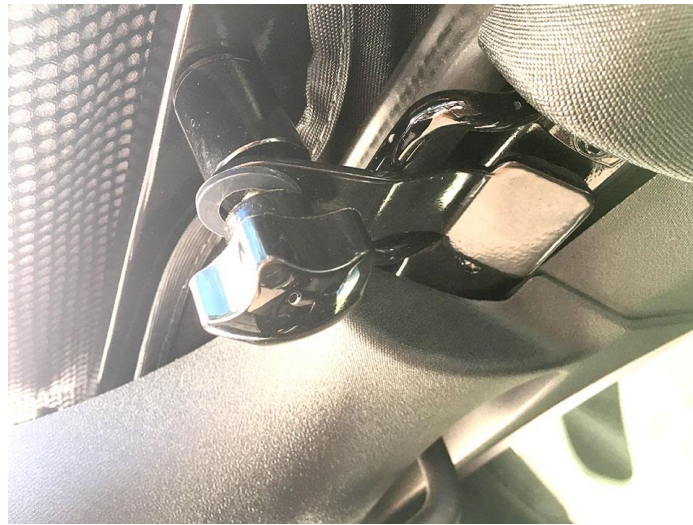

5. This concludes the installation of the windshield header.

Installation Instructions Written by ExtremeTerrain Customer Louis Orellana 06/21/2016