

T-REX

Billet Grilles

46481

**2008 JEEP
WRANGLER
UNLIMITED**

46481

**2008 JEEP
WRANGLER
UNLIMITED**

UPPER CLASS MESH INSERT

Tools Required:


Phillip/ Slotted Screwdriver
Standard Socket Set
Drill/1/8" Drill Bit
Pliers

Hardware / Parts List:

1 Mesh Inserts
5 U Nuts
5 #8 x 1" Screws

Step 1

Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

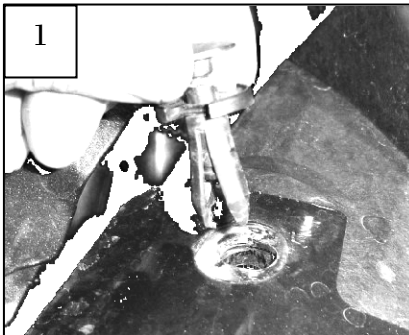

Step 2

Using the needle nose pliers; unclip the harness to the factory turn signals. These can be accessed through the wheel wells. Remove the upper factory pop clips holding the grille to the vehicles core support **(1)**. By pulling on the bottom center of the grille; this will release the four lower grille clips. Remove the grille from the vehicle and place on a soft surface to prevent damaging your factory grille.

Step 3

Place the grille face down on a soft surface. Place the insert into the opening. The two top holes should line up with the two factory grille top holes. While holding the grille insert in place; mark the lower mounting holes. Making sure that the insert is centered; Drill pilot holes for the mounting screws. Place a U nut onto each of the braces lining up with the mounting holes. With the grille centered; place a screw into each of the holes and tighten **(2)**.



Step 3

Replace the grille and all hardware. Reconnect the fog lights. Make sure all hardware is secure.

Thank you for purchasing your T-Rex billet grille. 9/3/08