

Installation Instructions for a JKS Adjustable Trackbar

Installation Time: 30-45 mins

Tools Required:

- 20 mm socket
- 1 7/8 " open end wrench
- Torque wrench
- Tape measure (optional)
- Rubber mallet

Before:



Installation

- Take out the stock track bar using the 20 mm socket. There are two bolts one on the axle and one on the frame side

Installation Instructions for a JKS Adjustable Trackbar




- Hit the track bar with the rubber mallet if necessary and remove the stock track bar
- Attach the frame side of the track bar and tighten the bolt using the 20mm socket.



- Turn the Steering wheel of the vehicle until the axle of the vehicle is centered underneath the body. You can do this by aligning the front and back of the fender and seeing how much tire is visible.

Installation Instructions for a JKS Adjustable Trackbar

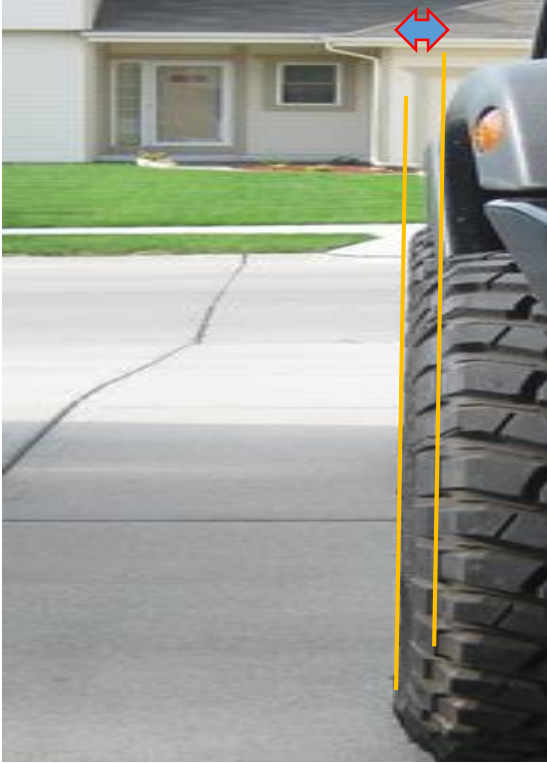

- Once aligned place the track bar on the axle side bracket and tighten the bolt to 125 foot pounds using the 20mm socket.



- Finally, tighten the jam-nut on the track bar.

Installation Instructions for a JKS Adjustable Trackbar



After



Installation Instructions Written by
ExtremeTerrain Customer Evan
Crook 3/30/16