

Installation of Rugged Ridge Front Sway Bar End Links

Installation Time: 30 Minutes

Tools Required:


- ✓ 18mm wrench and/or socket
- ✓ 19mm wrench or socket
- ✓ 5/16" allen wrench




It is not necessary to remove the front wheels when installing the sway bar end links. The front wheels can be turned to the extreme left and right to make access easier.

Installation Instructions:


What's in the box:

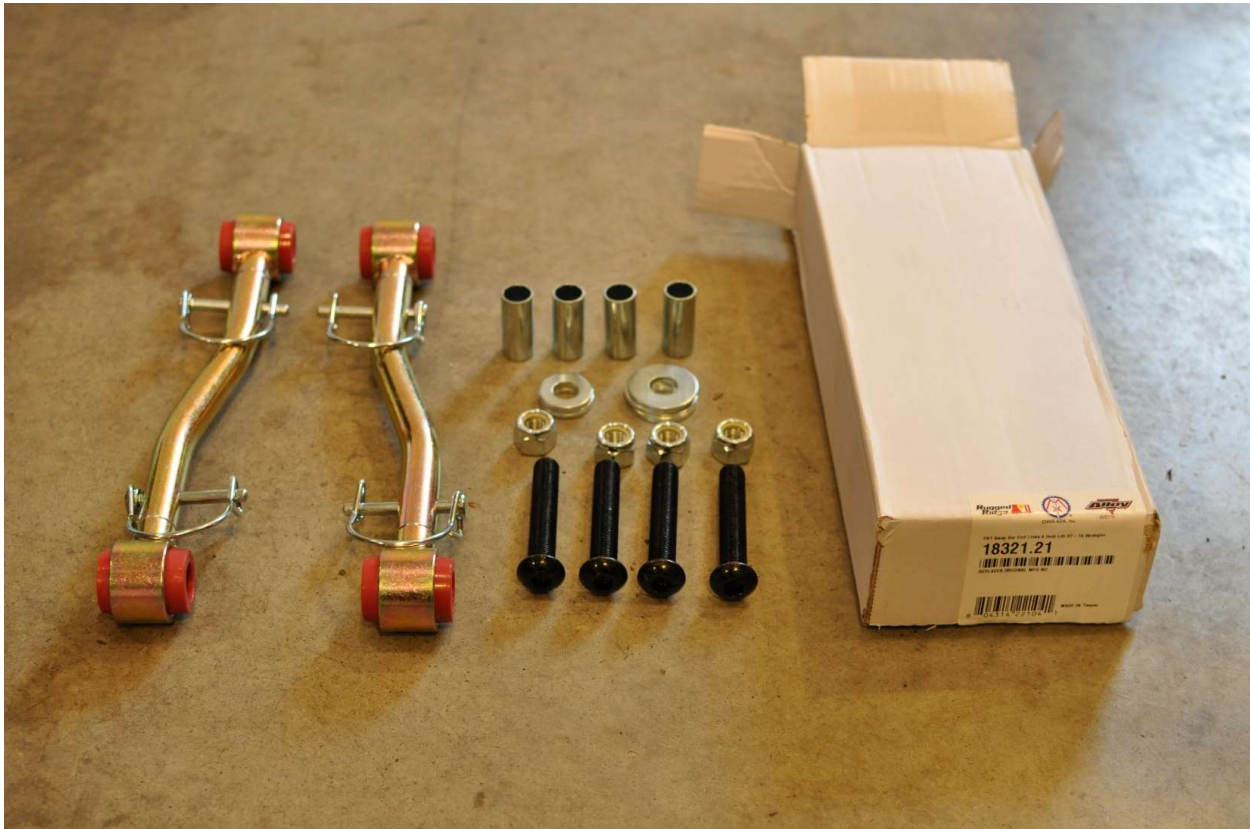


1. Remove the stock sway bar end links using an 18mm wrench for the bottom and an 18mm and 19mm wrench for the top.


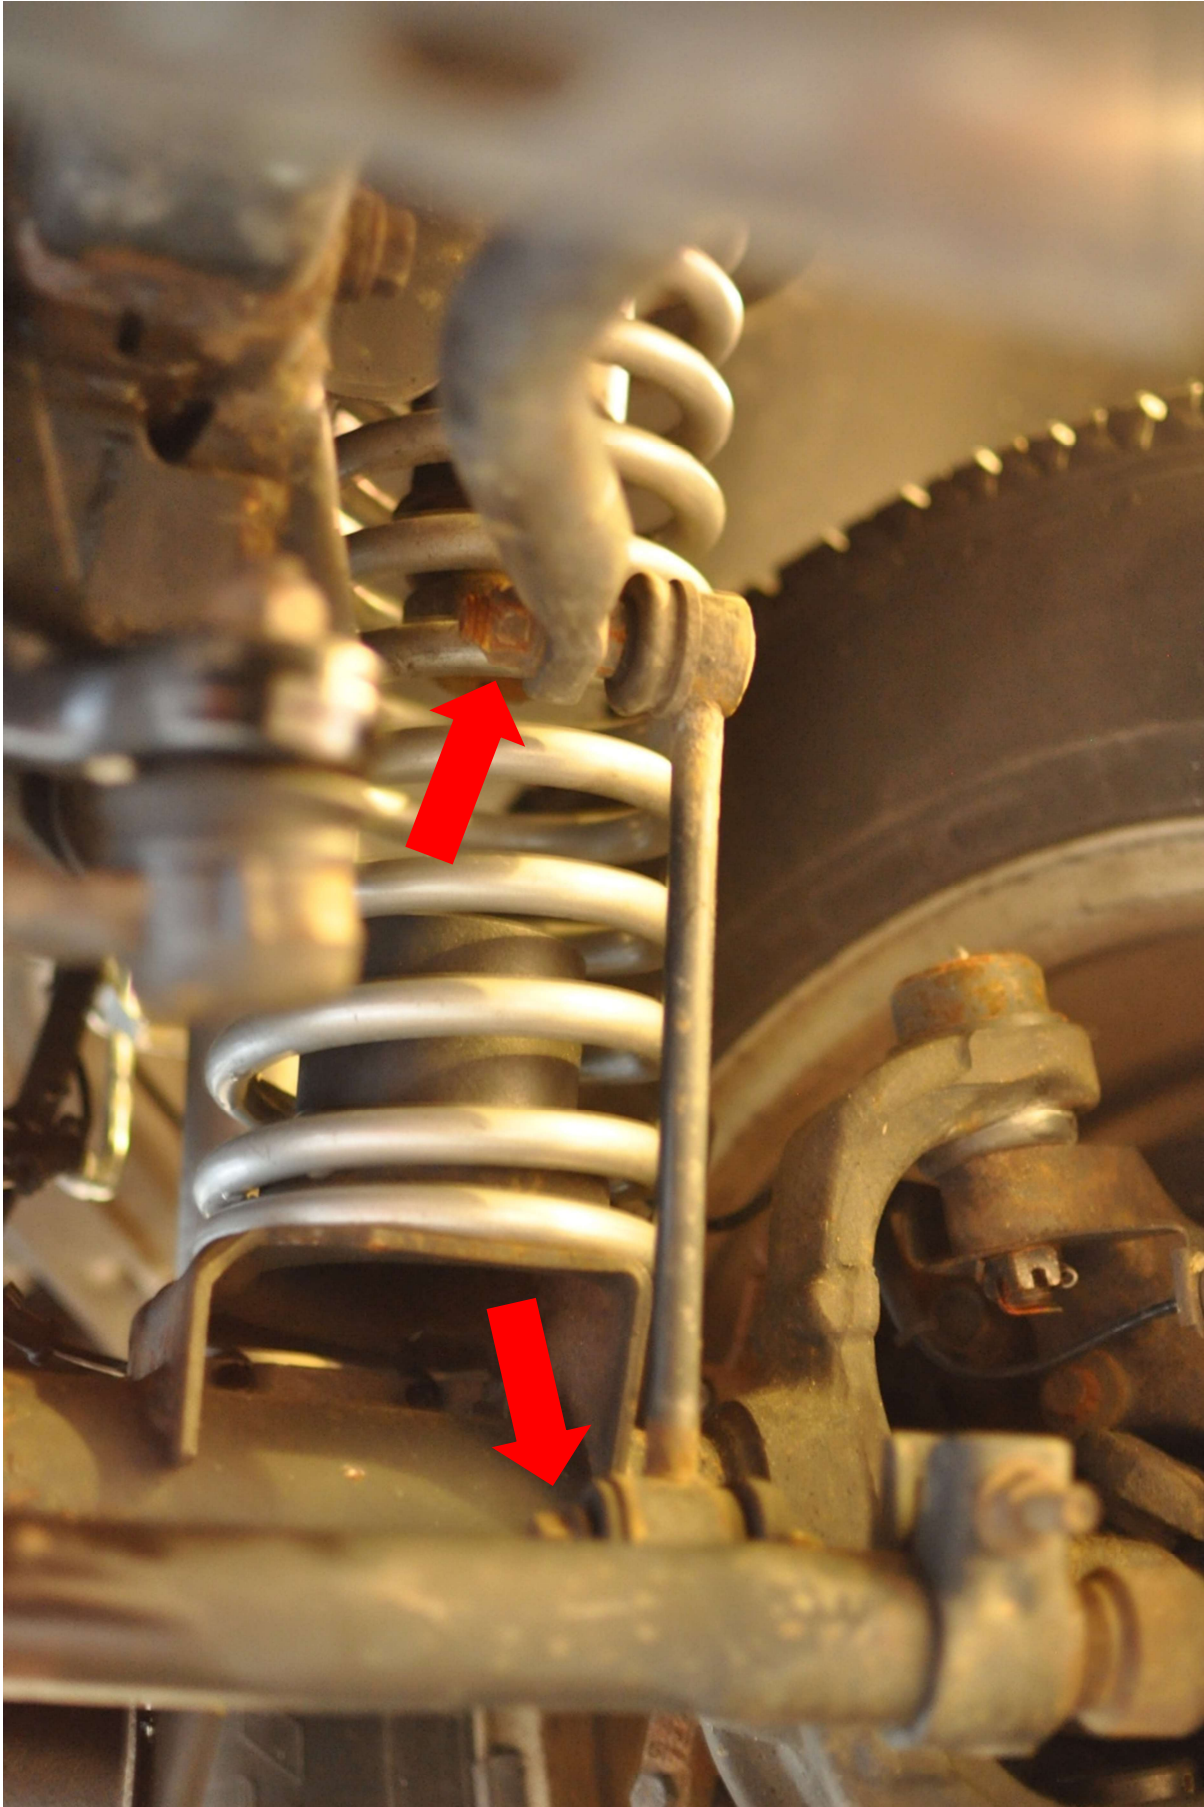


- 2. Press in the metal bushings (a press or vise should be used to do this but a hammer and block of wood could be used if no other means are available)

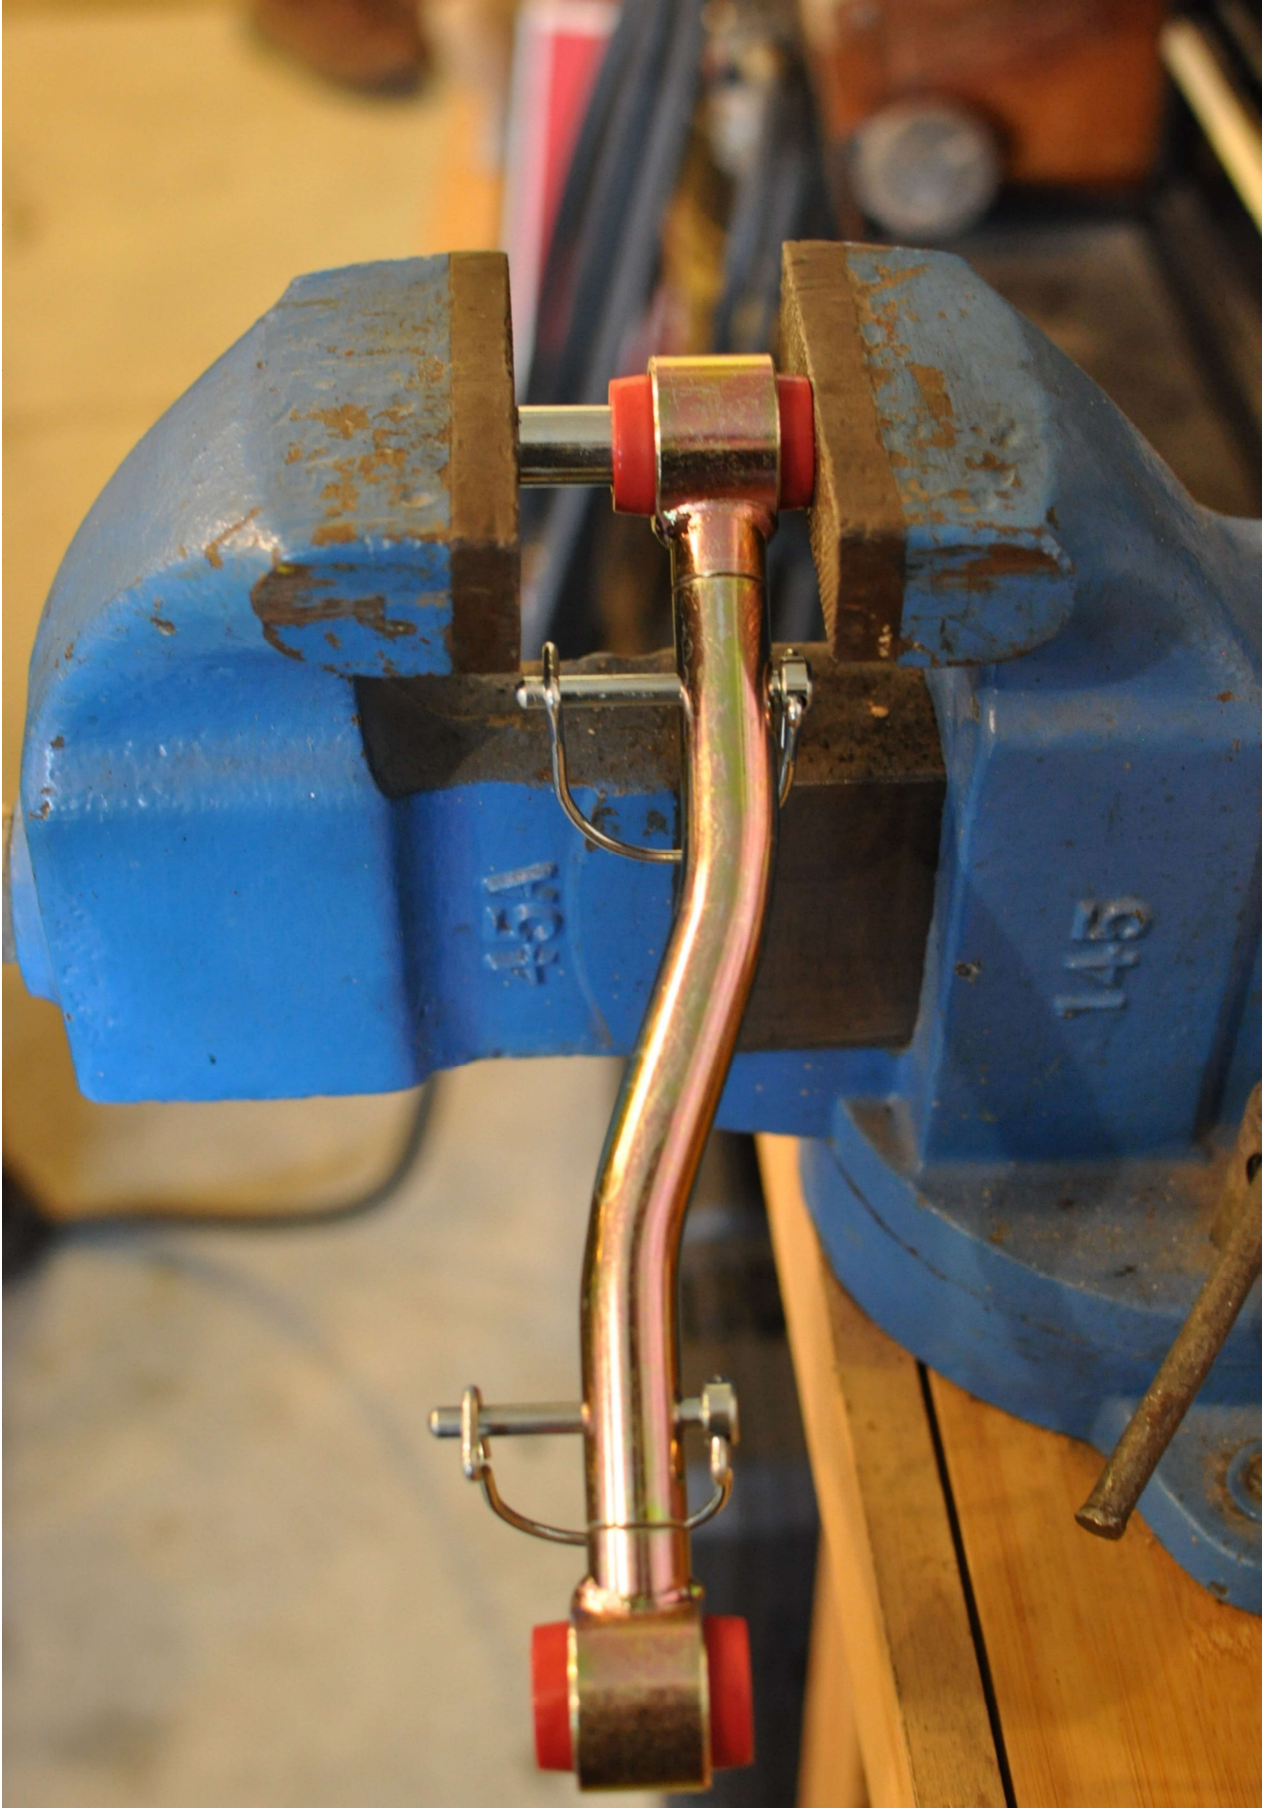

3. Install the Rugged Ridge sway bar links on both sides of the vehicle using the supplied bolts, nuts and washers. Bolts should point inward, away from tire. Torque upper and lower bolts to 40 ft-lbs.

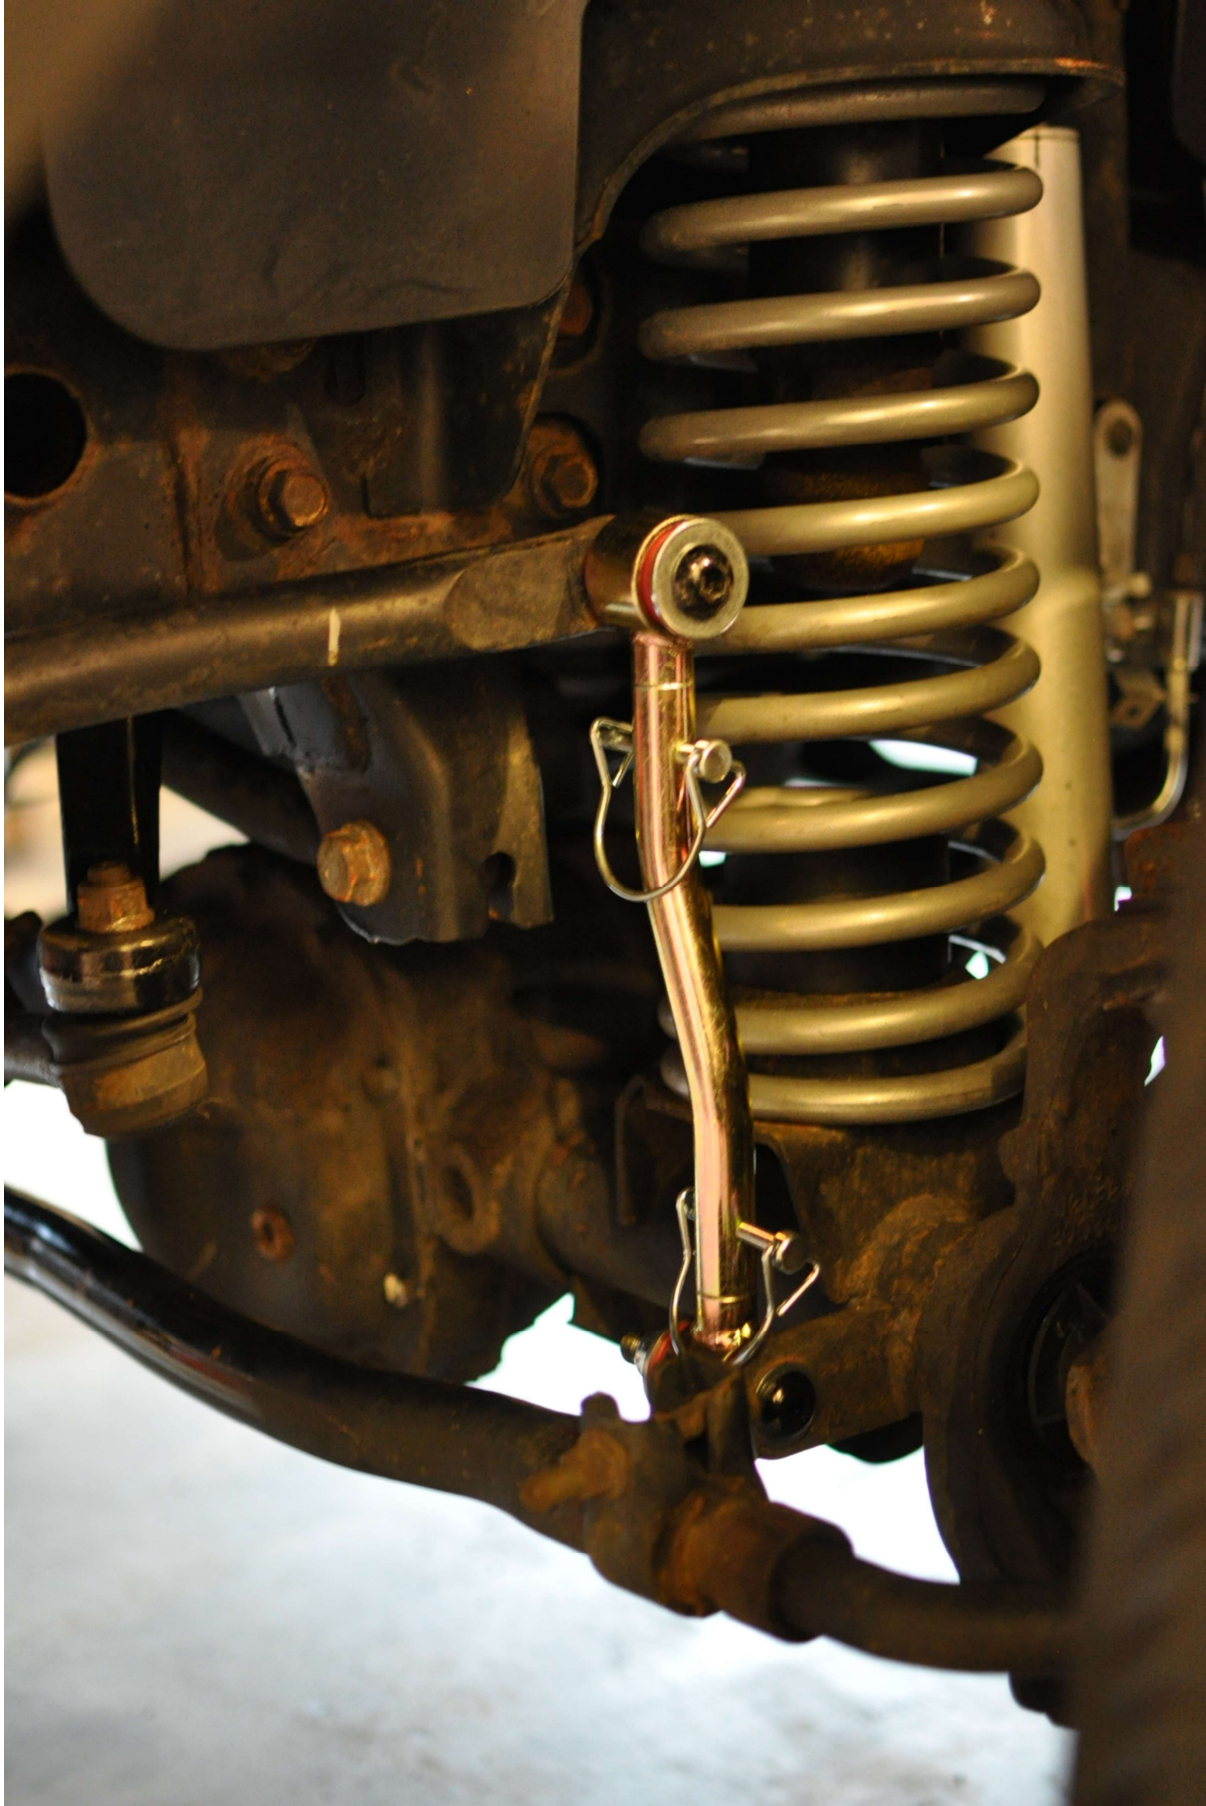

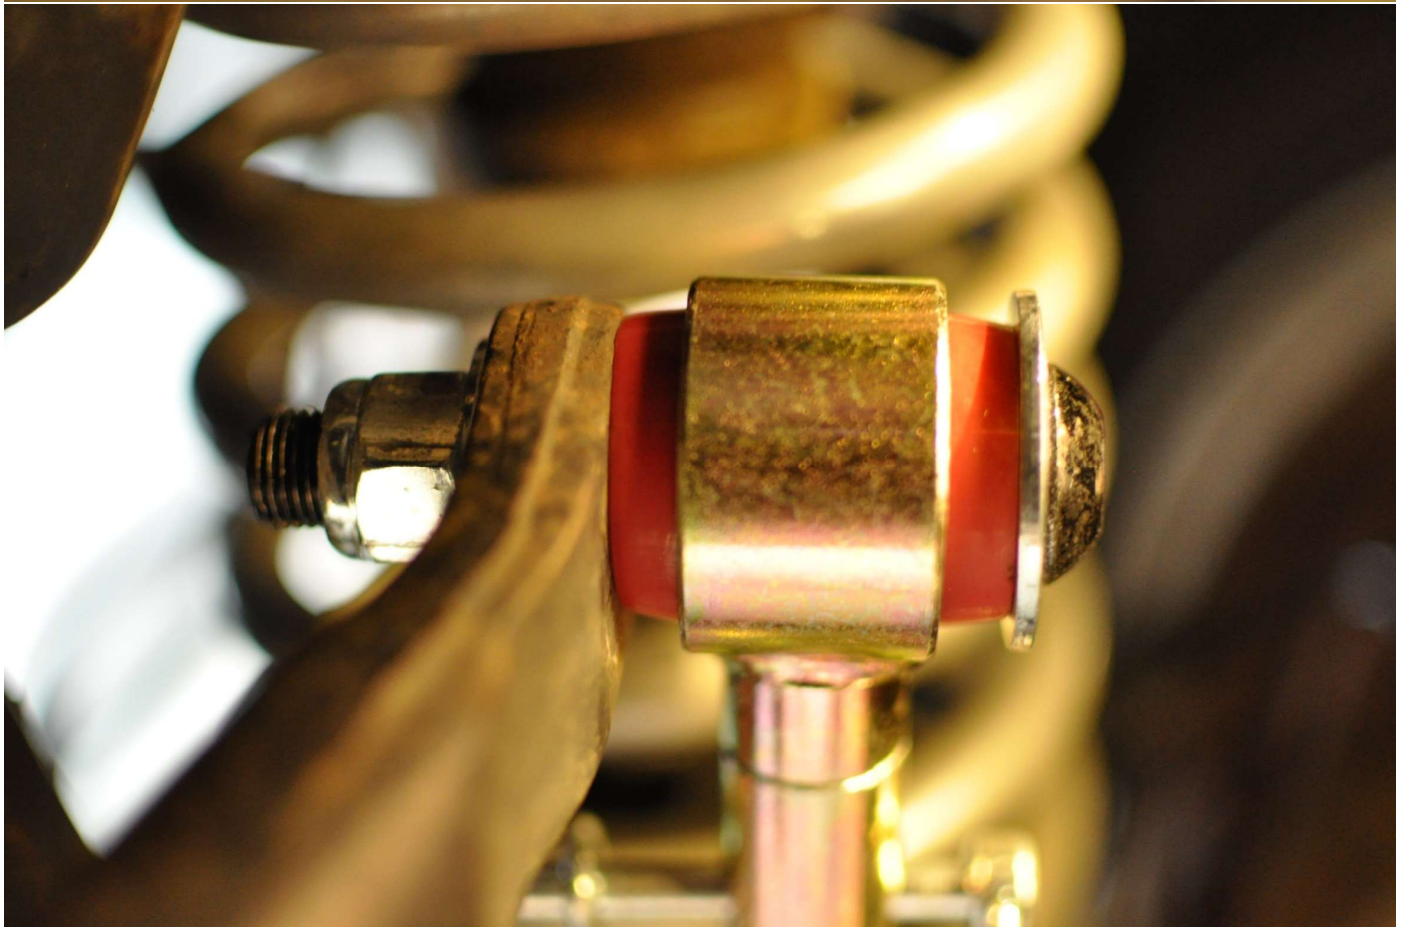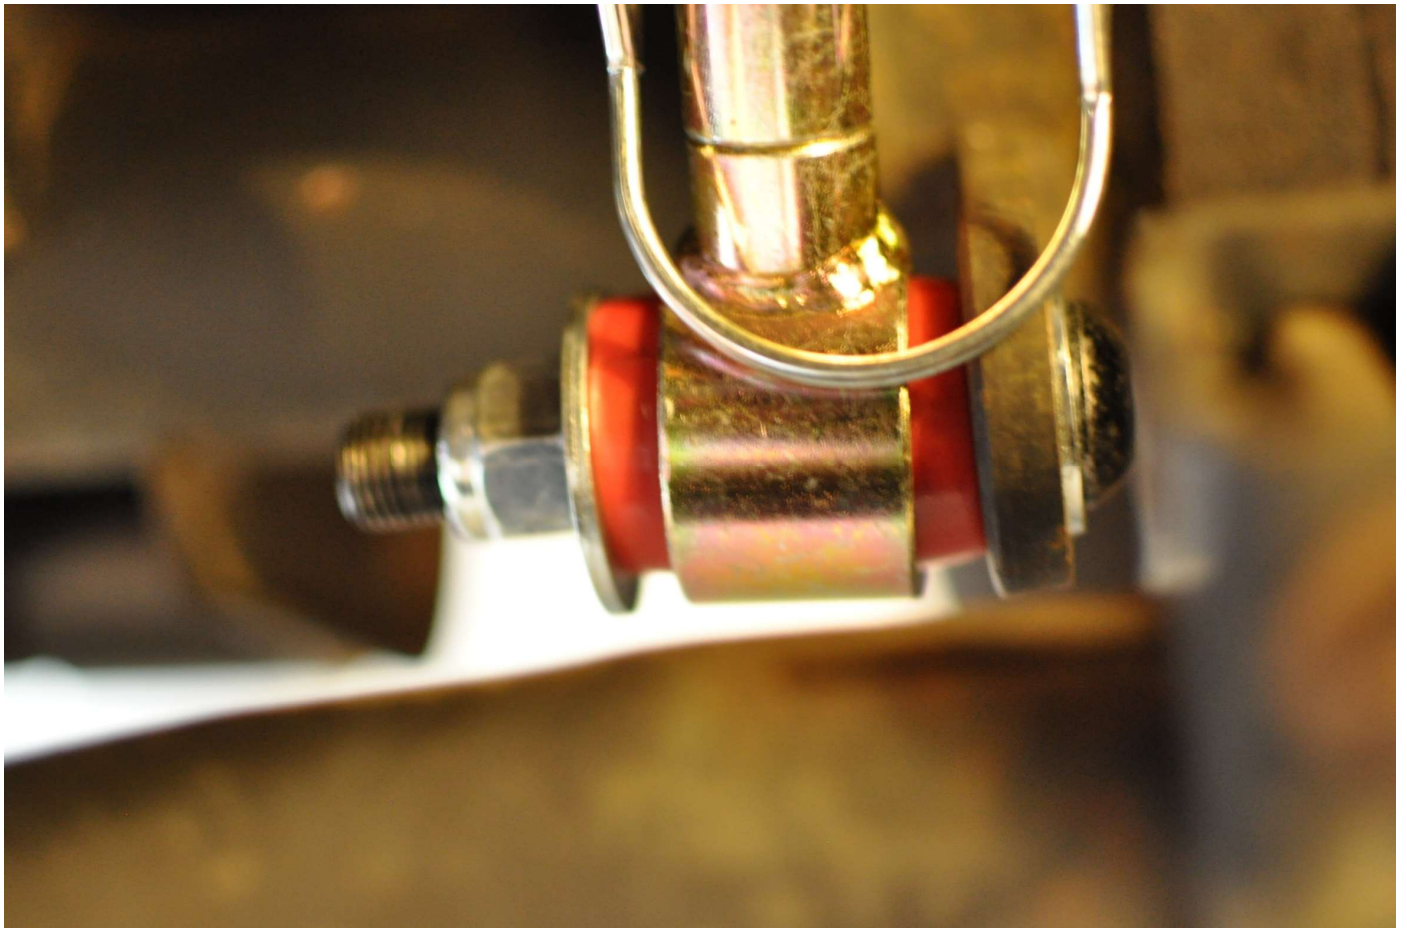

Installation Instructions Written by ExtremeTerrain Customer Chad Brubaker 1/22/2017