

Installation Instructions

Tools Needed:

- 4MM Allen Wrench
- 5MM Allen Wrench
- T40 Torx Bit

Contents:

- (4) Cube Lights

Pillar Mounted Dual Cube Brackets:

- (1) Set of Brackets (4 total pieces)
- (2) Pieces of Foam
- (4) M6x1.00 50mm Stainless Steel Bolts
- (4) M6 Metal/Rubber Washers
- (4) 11mm Coated Spacers
- (2) M8x1.25 30mm Stainless Bolts
- (2) M8 Metal/Rubber Washers
- (2) 8mm Coated Spacers

Cube Light Mounting Hardware:

- (8) M5x.8mm 16mm
- (8) M6 Lock Washers
- (8) M6 Flat Washer



Step 1:

Begin by loosely assembling the bracket. Using the M5 hardware, attach the cube lights to the bracket. ****Note: Do not fully tighten the hardware.**



Step 2:

Apply the supplied foam to the back side of the bracket.



Step 3:

Locate and remove the factory hardware. ****Note: The hardware will not be reused.**

Dual Pillar Mounted LED Off Road Lights w/Bracket 2018+ JL Wrangler




Step 4:
Place the thicker spacers on cowl between the paint and the light bracket before loosely installing the provided M6 washer and bolt.



Step 5:
Install the thinner spacer between the paint and the side of the light bar bracket using the supplied M8 washer and bolt.



Step 6:
Before tightening down all the hardware adjust the pillar mount assembly so that the brackets don't make contact with the paint.

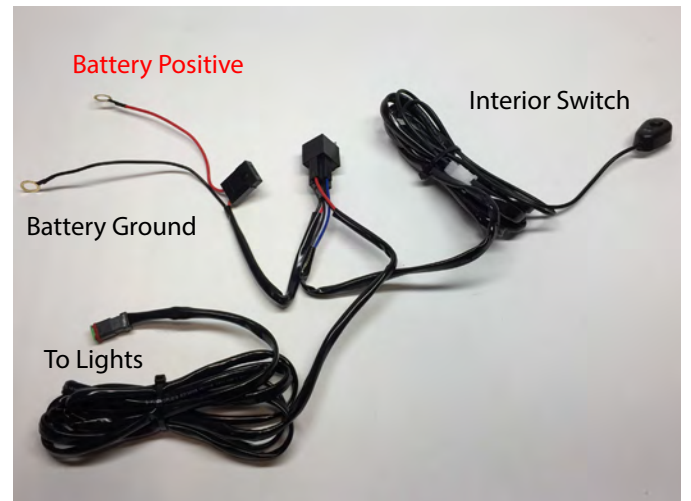

Step 7:
Run the LED wiring to the cube lights. Connect the red eyelet to the positive battery terminal, and the black eyelet to the negative terminal. Run the on/off switch to the passenger compartment using a suitable body grommet or by drilling your own hole. Zip tie the excess wire away from heat and moving parts.