

Installation of Pypes Performance HGC Exhaust System

Before:



Tools Required:

- 5/8 " socket wrench
- WD-40 or other lubricant
- Crowbar
- Crescent Wrench

Step 1:

- Remove the Stock tailpipe by loosening the nut attached to the midpipe using the 5/8" socket wrench.

Step 2:

- Once the nut is loosened with 5/8" socket, spray WD-40 on the rubber hangers on the left and the right side holding the tailpipe and muffler. (see picture of hanger)



Step 3:

- Using the crowbar pry the rubber hanger away from the muffler to free the muffler. Start with the passenger rear side.

Step 4:

- Once both hangers are removed and the muffler is hanging, pull the muffler away from the mid pipe.

Step 5:

- Next step is to remove the mid pipe and the resonator.

Step 6:

- Using the 5/8" socket loosen all the bolts to the mid pipe and the resonator.

Step 7:

- Using WD-40 or preferred lubricant, spray all rubber hangers and pry them off with the crowbar.

Step 8:

- Pull the resonator away from the mid pipe and take out the mid pipe and the resonator.

Step 9:

- Now that everything is removed start by putting the pipes mid pipe on with the connectors provided and tighten with 5/8" socket.



Step 10:

- Next connect the muffler to the mid pipe using the appropriate connectors and tighten with 5/8" socket.



Step 11:

- Put the tailpipe in and hang them with the hangers provided.




Step 12:

- Once the tailpipe is hung connect the tailpipe to the muffler but do not tighten the connector until the exhaust is aligned like wanted.



Step 13:

- Once aligned, tighten muffler and tailpipe connections with 5/8" socket and go listen to the new sound!

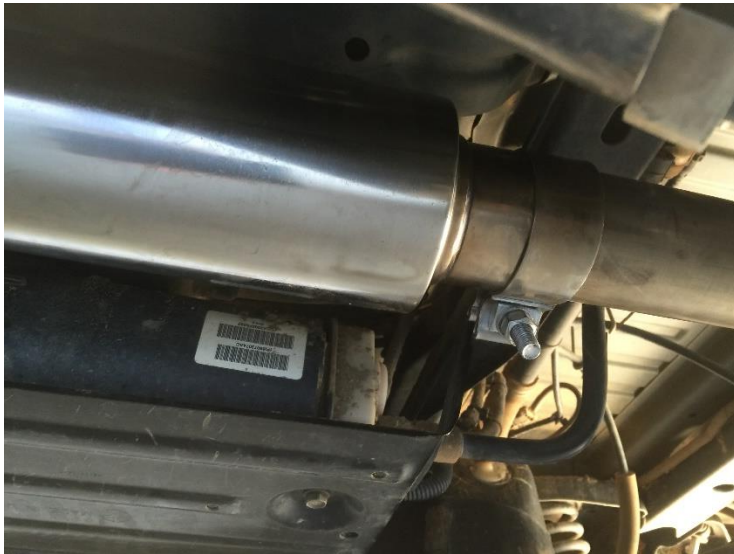

After:



Installation Instructions Written by ExtremeTerrain Customer Evan Crook 2/29/16