

Installation & CARE

2014-2018 TOYOTA TUNDRA PROJECTOR HEADLIGHTS WITH SEQUENTIAL LED TURN SIGNAL INSTALLATION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	Plastic Fastener Remover	10 mm socket	
			

PRODUCT NUMBER

2LHP-TUN14-SQ-TM
2LHP-TUN14G-SQ-TM
2LHP-TUN14JM-SQ-TM
2LHP-TUN14BK-SQ-TM



LET'S START THE INSTALLATION



STEP 1

Remove the two plastic fastener clips and the four 10mm bolts




STEP 2

Lift up the top part of the front grille



STEP 3

Pull out the front grille from the bottom

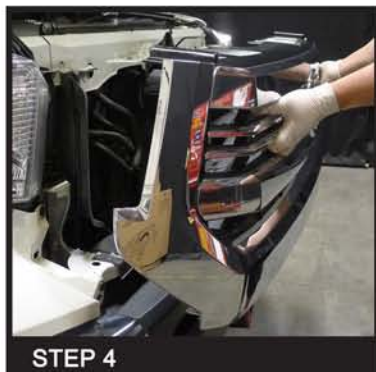


STEP 4

Remove the front grille



STEP 5

Remove the two plastic fastener clips

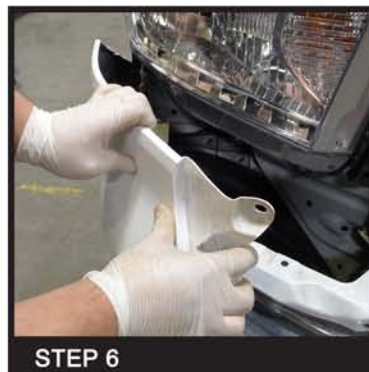

STEP 6

Pull out to remove the extension panel



STEP 7

Remove the one 10mm headlight mounting bolt at the bottom



STEP 8

Remove the two 10mm headlight mounting bolts at the top



STEP 9

Disconnect the headlight harness



STEP 10

Remove the factory headlight housing



STEP 11

Remove the turn signal light bulbs from the socket, install the turn signal socket to the new headlights housing



STEP 12

Connect the headlight harness



STEP 13

Seat the new headlight assembly in place




STEP 14

Reinstall the two 10mm headlight mounting bolts at the top



STEP 15

Reinstall the one 10mm headlight mounting bolt at the bottom

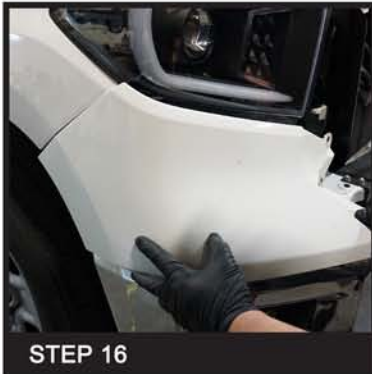

STEP 16

Reinstall the extension panel




STEP 17

Reinstall the two plastic fastener clips




STEP 18

Please repeat the steps from 5 to 17 for the opposite side

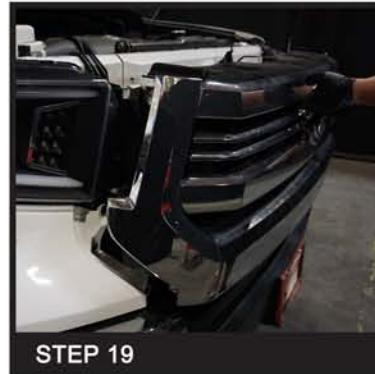


STEP 19

Reinstall the front grille

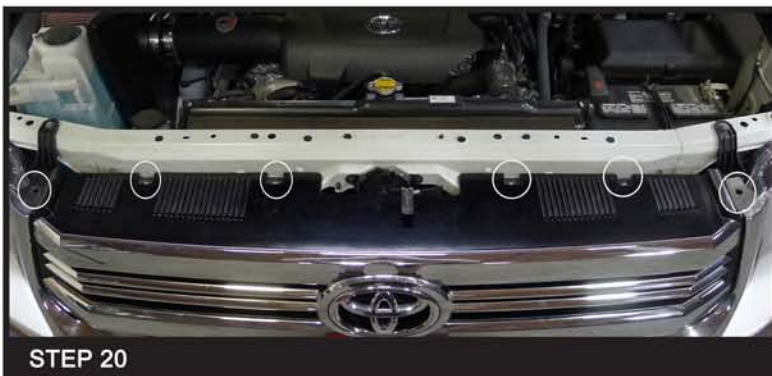

STEP 20

Reinstall the two plastic fastener clips and four 10mm bolts

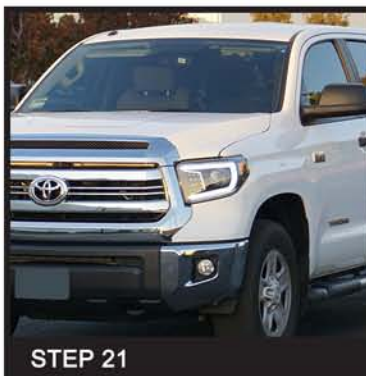

STEP 21

Close the hood to complete installation