


EZ Hard Fold Hard Tonneau Cover

Contents:

- (1) EZ Hard Tonneau Cover
- (4) Bed Rail Clamps
- (4) Cotter Pins

Tools Required:

- None

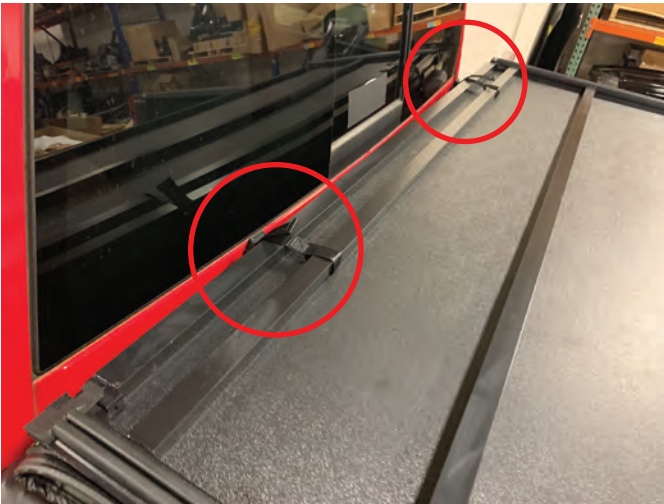

Step 1\\

Place the tonneau cover on the bed of the vehicle. The shorter latch component will be closest to the cab. The longer strap component will be on top.




Step 2\\

Fold the cover out so that it covers the bed of the vehicle. ****Note:** The cover will lift off the bed rails slightly when not secured to the vehicle. Center the cover to the bed of the vehicle side-to-side and front-to-back.


Step 3\\

Once centered, fold the cover back up to access the latches closest to the cab.

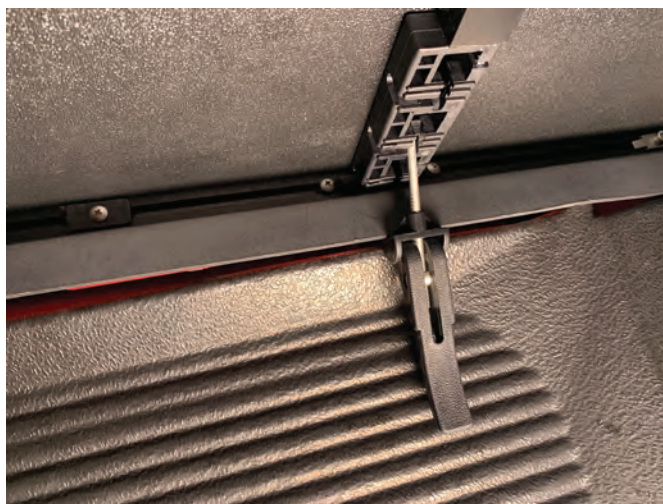

Step 4\\

Adjust the latches as needed for your application. There are several different adjustment slots depending on the application. Use the slot that allow for the best fit. ****Note:** For Vehicles with utility rails see note at end of install.

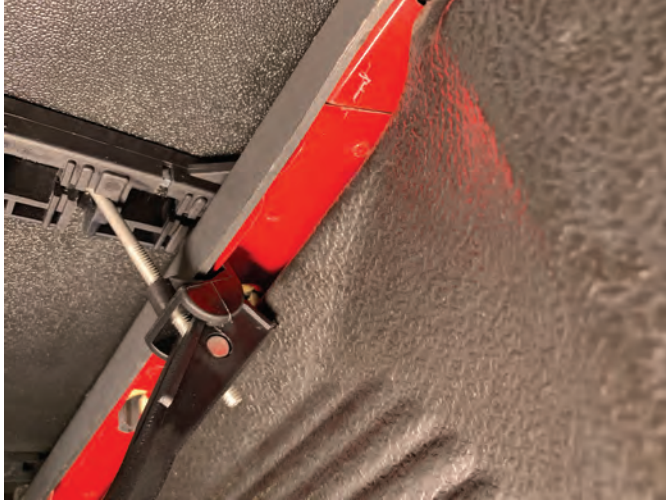

Step 5

When adjusting the latches, the latches **MUST** catch the metal on the bed rail. If your vehicle has plastic bed rail covers you may need to trim the cover to allow the latch to catch the metal rail.




Step 6

Insert the supplied cotter pin to lock the latches in place.



Step 7


Fold down the cover and repeat the process for the rear latches.

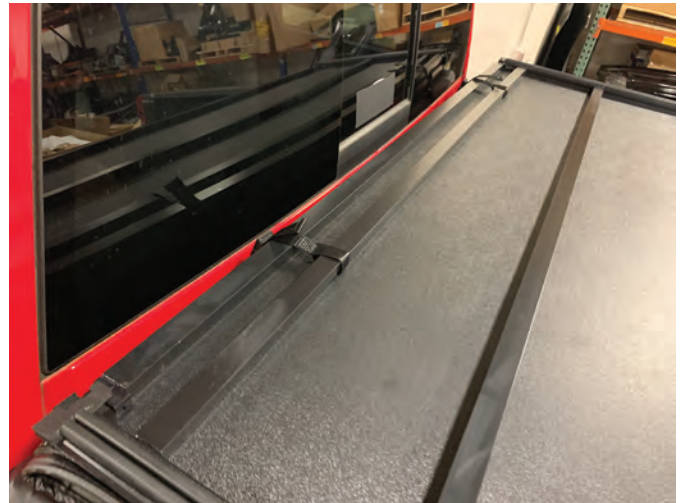

Step 8

Fold the tonneau cover back and secure the cover using the pre-installed straps when not in use.

Toyota and Nissan Trucks with Factory Utility Rails

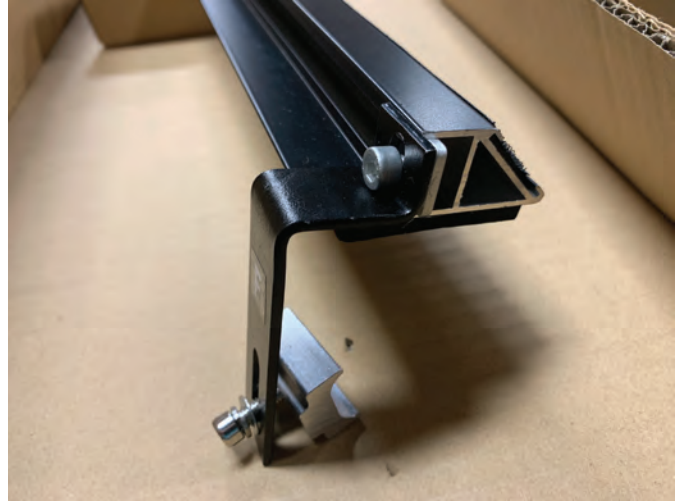

Utility Rails\\

Remove the rail end caps and install the supplied utility rail clamps. There are several different clamp styles depending on the tonneau cover style. Above are (2) different examples.