

Velcro Roll-Up Tonneau Cover

Contents:

- (2) Bed Rail Channels
- (1) Soft Roll Up Tonneau Cover
- (6) Bed Rail Clamps

Tools Required:

- Allen Wrench
- Phillips Head Screw Driver



Step 1 \\

Place the rails on the vehicle. Velcro side out with the latch portion of the rail facing the rear of the vehicle.

Step 2\\

Space the rail clamps evenly over the distance of the bed of the truck. On this application (3) are used on each side. Tighten the clamps enough so that they are secure but leave them loose enough that you can still slightly move the rails. **Note: For Vehicles with utility rails see note at end of install.




Step3\\

Slide the Tonneau cover into the rails at the front of the bed. The plastic portion slides into the rail on either side. Use the phillips screw to secure the tonneau cover to the rails.

Step4

Fold the tonneau cover out towards the rear of the vehicle.

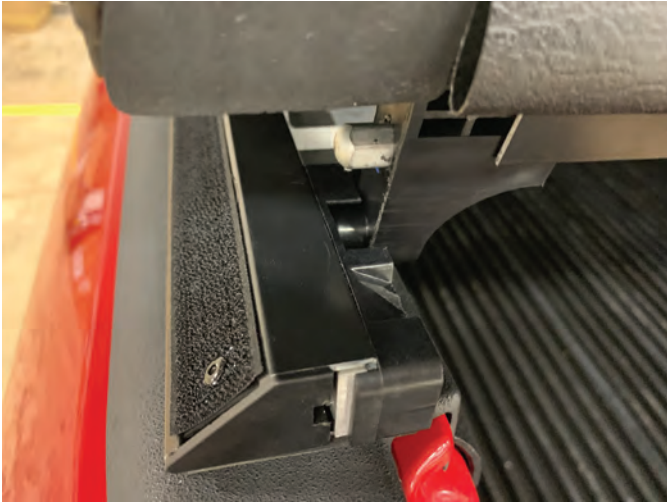**Step5**

Hook the cover into the latch portion of the rails. Note if the cover doesn't engage both latches, you will need to adjust the rails. Move the rails around so that they are even side-to-side and front-to-back securing the tabs on the cover. Latch the cover onto the rails. They are designed to be a tight fit at will require some force to clip in. Once secured, reach under the tonneau cover and tighten the last clamp on either side.


**Step6**

Pull the release to unlock the cover from the rails. Fold the cover back and tighten all remaining clamps. Make sure all set screws are tight on the tonneau cover and rails.

**Step7**

Secure the tonneau cover using the pre-installed straps when not in use.

Toyota and Nissan Trucks with Factory Utility Rails

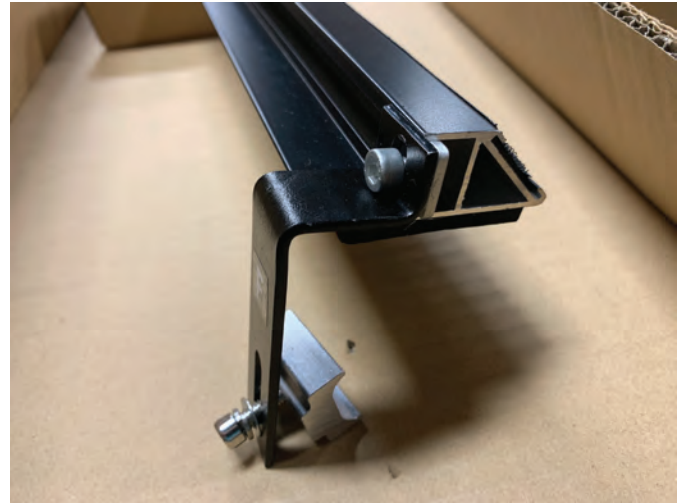

Utility Rails\\

Remove the rail end caps and install the supplied utility rail clamps. There are several different clamp styles depending on the tonneau cover style. Above are (2) different examples.